

Step By Step Assembly Instructions For The 2005 X-360 36 Volt Electric Scooter

Attach the front wheel to the front forks. Enclosed with your scooter is a front wheel and axle along with two sets of nuts and washers for each end.



Remove the nuts and washers and insert the axel into the wheel. The black washer goes in between the wheel and fork while the flat washer goes on the outside of the fork and then is secured in place with the nut.



Front wheel installed properly.



Attach the body to the frame. Your scooter is shipped without the body attached to avoid possible damage during shipping. Attaching the body is easily done using the enclosed set of bolts, rubber washers and nuts.



On the foot rest area of your scooter body are two holes on each side. Simply insert the bolt into the hole and place the rubber washer in-between the scooter body and metal frame underneath. Secure the body to the frame with the enclosed lock nuts. After your body is properly secured, attach the enclosed footpad decals to each side.




Attach the trunk rack to the scooter. Your trunk rack comes with 2 sets of bolts and nuts. Slide the bottom posts into the holes on the back of the scooter body near the taillight. Secure the posts to the scooter frame using the enclosed bolts and nuts. Slide the seat clamp over the seat post.





Attach the optional trunk to the trunk rack. Your trunk comes with the necessary hardware to attach the trunk to the rack if you choose. In the picture below are 2 rubber bushings and metal plates along with 4 screws and nuts.

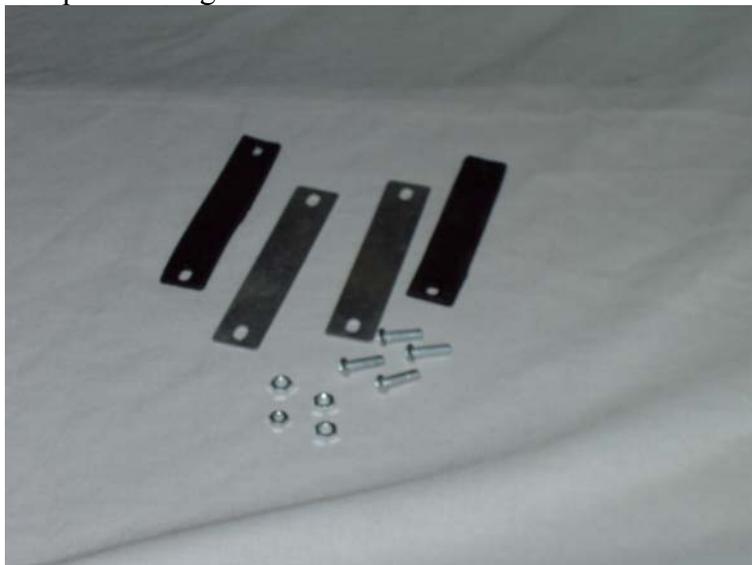

Place the two rubber bushings on the rack.



Then place the trunk on the rack over the rubber bushings. The two metal plates are placed inside the trunk and secured to the rack with the four enclosed screws and nuts.



Insert the seat post and seat. Insert the small end of the seat post into the bottom of the seat and tighten the nuts. Next insert the seat post into the post on the scooter where the seat clamp from the trunk rack is located. Adjust the height and then tighten the clamp to secure the seat in place.

Picture not yet available.

Attach the handlebars to scooter. Insert the handlebar into the handlebar post being sure to align the lock pin with the handlebar. Position the clamp just under the locking pin and tighten it in place securely.



We want you to enjoy your experience on your new X-Treme Electric Scooter. If you have any questions that need to be answered by phone, do not call the company you bought your scooter from, instead call the technical support department Monday – Friday 9AM – 5PM CST at 1-702-952-0542 or e-mail them at support@x-tremescooters.com and leave them a short note with your questions or problem and someone will get back to you during business hours by phone or e-mail.